

cricket®

Clear and Simple
Quick Start Guide

ZTE Fanfare™ 3

ZTE

Getting to know your
ZTE Fanfare™ 3



Phone setup

1. Insert your fingernail into the slot at the bottom corner of the back cover, and gently lift and remove the cover.
2. Install the nano-SIM card and the microSDHC™ card (not included) as shown.
3. Insert the battery, making sure the connectors align. Gently push down on the battery until it clicks into place.
4. Replace the back cover.

WARNING!

To avoid damage to the phone, do not use any other kind of SIM card or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

Touch screen

Navigating your phone

- Press and hold the screen to unlock.
- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- Spread two fingers apart or pinch them together on the screen to zoom in or out on a web page or Gallery image.
- To return to the previous screen, tap the **Back key**.
- Tap the **Home key** ○ at any time to return to the main home screen. Press and hold the **Home key** ○ to access Google search.
- Tap the **Recent apps key** to access recently viewed apps.
- Tap **Apps** ☰ to access applications on your phone.

Note: To exchange the positions of the Back key and Recent apps key, tap **Home key** ○ > **Apps** ☰ > **Settings** ⚙ > **Navigation key** and select an option.

Notifications panel

- Drag your finger down from the top of any screen to see the notifications panel. Pull down one more time to reveal additional options.
- Tap to access the full Settings menu.
- Tap to add, move, or delete icons in the quick settings menu.
- Swipe right or left to clear individual notifications, or tap **CLEAR ALL**.

Personalize

Set wallpaper

- To change your home screen or lock screen wallpaper, press and hold a blank part of the home screen and tap **Wallpapers**.
- Tap the lock screen or home screen preview, and then tap a wallpaper to set it. You can also tap **GALLERY** or **LIVE WALLPAPER** for more options.

Add to home screen

- Tap **Apps** ☰, press and hold the desired app, and drag it to the home screen.
- Press and hold a blank part of the screen and tap **Widgets**. Press and hold the desired widget and drag it to the home screen.
- Press and hold a blank part of the screen and tap **Themes** to change the theme or **Home** to manage the home screen panels.

Organize home screens

- Press and hold an icon to drag it to a new location. Drag it to **Remove** to delete it.
- Press and hold an icon and drag it to **Folder** . Drag icons to an existing folder to add them to it.
- To rename a folder, tap it, and then tap the folder name. Enter a name and tap **Done**.

Calls and voicemail

HD Voice Capable

Enjoy crystal clear conversations.*

Make a call

1. From the home screen, tap **Phone** .
2. Tap the search box at the top of the screen, or tap **Dialer** to open the dialpad. Enter a contact name or a phone number.
3. Tap the matching contact or **Call** to place the call.

Check voicemail

1. From the home screen, tap **Phone** > **Dialer** .
2. Press and hold the **1 key** . (On first use, follow prompts to set up voicemail.)
3. If prompted, enter your voicemail password.

Use call waiting

Call waiting helps you answer or hold a call while you are on an existing call.

1. While on a call, you will hear a tone if another call comes in. Tap **Hold current and answer**.
2. Tap **Merge** to merge calls or tap the other call to switch between active calls.

*To experience Cricket HD Voice, both callers must have a compatible HD Voice-capable smartphone and make the call over Cricket's LTE network or a compatible network. Cricket's LTE coverage is not equivalent to its overall network coverage. HD Voice calls made on a compatible device and on the LTE network may not experience an HD Voice connection at times of network congestion. Other carriers' networks may interoperate with Cricket's LTE network to support an HD Voice call.

More information

On the web

Detailed support information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID SRG-Z852. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2017 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC™ logo is a trademark of SD-3C, LLC. The **Bluetooth**® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

© 2017 ZTE CORPORATION. All rights reserved. No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation. The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.





Printed in China

Text and picture messaging

Send a text message

1. From the home screen, tap **Messaging** .
2. Tap **New message** to start a new text message.
3. In the **To** field, enter a number or contact name, or tap **ALL CONTACTS** to select from your contacts.
4. Tap the **Send message** field and enter your message.
5. Tap **Send** to send the message.

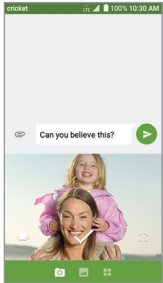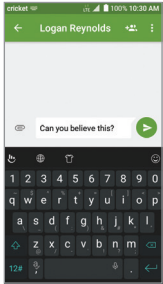



Send a picture message

1. Follow steps 1-4 above.
2. Tap the **Paperclip** .
3. Tap **Check** to snap a photo, or tap **Gallery** to select a photo from your gallery.
4. Tap **Send** to send the message.

Email

Email setup (Gmail™, Yahoo!®, etc.)

1. From the home screen, tap **Apps** ☰ > **Email** .
2. Follow the steps to set up your account.

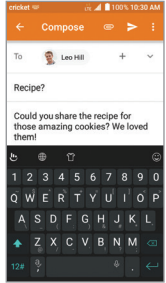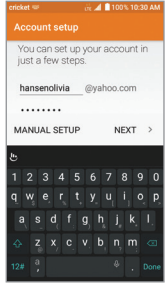

Create and send an email message

1. From the home screen, tap **Apps** ☰ > **Email** .
2. To compose a new message, tap **Compose** .
3. In the **To** field, enter an email address or tap **Add contact** to select from your contacts, groups, or history.
4. Enter a subject and email message.
5. To attach files, tap **Paperclip** and choose the type of attachment you want.
6. Tap **Send** to send the message.

Note: To set up a corporate email account, contact your IT administrator.

Cricket services

These services make using Cricket even better and easier.

My Cricket: Access billing, make a quick payment, view usage, and access support from the palm of your hand.

Visual Voicemail: Quickly view, access, and play back your voicemail messages. Easily save important numbers and respond to messages by calling back or texting.

Deezer from Cricket: Listen on-the-go with ad-free streaming music, download your favorites to your phone, and get customized playlists based on your preferences.

Cool tools

Selfie: Take selfies quickly and easily. Access the front-facing camera from either the lock screen or the Apps menu to instantly capture the moment.

AskMD: Consult with AskMD® about symptoms or health conditions, find a nearby physician, and organize your health information to prepare for more effective doctor visits.

Apps on Google Play™

The Fanfare 3 is preloaded with great apps to take your experience to the next level. To find additional apps, check out Google Play.



Access Google Play

1. From the home screen, tap **Play Store** .
2. Enter your existing Google™ account or create one following the steps on the screen.

Navigate Google Play

From the Play Store, you have multiple ways to search for apps, games, and more.

1. Tap a category to browse apps, games, movies, and music organized by popularity or category.
2. Tap the Google Play search bar to search the Play Store for a specific game or app.
3. To install, tap the app and follow the instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating it in **Apps** ☰.

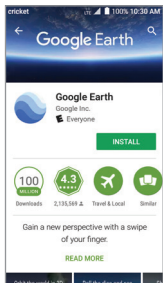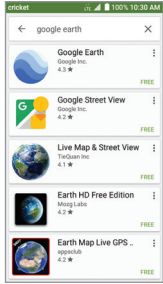

Camera and video

The Fanfare 3 lets you choose from four different modes (manual, panorama, multi exposure, or time-lapse video) to satisfy every type of photographer!

Take a picture

1. From the home screen, tap **Camera** .
2. Zoom in and out by pinching/spreading your fingers on the screen or by pressing the **Volume key**.
3. Tap the **Shutter button** to take a photo.
4. Tap **Settings** to adjust your camera settings.

Take a video

1. In camera mode, tap **VIDEO** > **Start recording** to start, tap **Pause recording** to pause, tap **Resume recording** to resume, and tap **Stop recording** to stop recording video.
2. Tap **Settings** to adjust your camcorder settings.

Share a picture or video

1. From the home screen, tap **Apps** ☰ > **Gallery** .
2. Tap a photo or video. (In Album view, first tap an album.)
3. Tap **Share** and select an option for sharing.

